DBCAP5
DIGITAL POWER CAP 5F
DBCAP10
DIGITAL POWER CAP 10F

User manual

Thanks for choosing our DB Drive product.
In order to obtain the best sound quality,
We highly recommend this product be
installed by your local DB Drive dealer.

WARNING

This symbol signifies important instructions.
Failure to follow these instructions may lead
to serious, and even fatal injuries.

FIG.1 POWER SUPPLY/REMOTE SWITCH-ON CONNECTIONS

(1) GND terminal for the ground, to the battery's minus pole
(2) REM terminal for remote switch-on
(3) Terminal for +12V battery voltage
(4) Battery
(5) To your car radios remote connection

FIG. 1

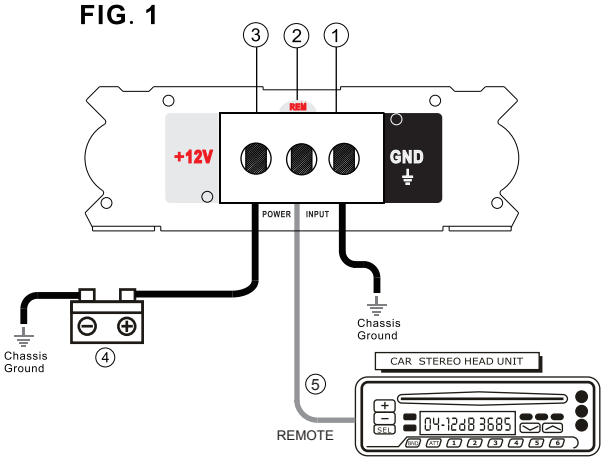

FIG.2 AMPLIFIER CONNECTIONS

(1) First connect the GND terminal to chassis ground
(2) Connect the amplifier's "+" to the power output plus pole
(3) Connect the amplifier's GND terminal to chassis ground
(4) Make sure to fuse the power line connecting the capacitor to the amplifier

FIG. 2

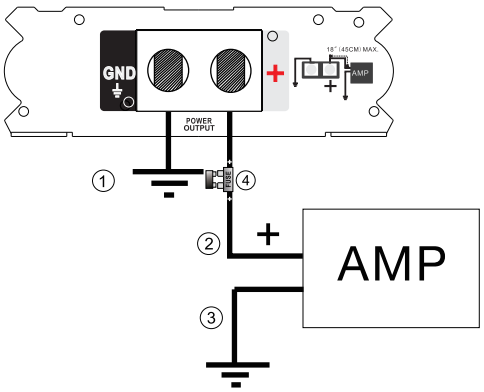

DB Research L.L.P.
302 Hanmore Industrial Parkway // Harlingen, TX 78550
ph: 877.787.0101 // fx: 956.421.4513 // www.dbdrive.net

LIMITED WARRANTY

DB Drive warrants any products purchased in the U.S.A. from an authorized DB Drive dealer. All products are warranted to be free from defects in material and workmanship under normal use and service for a period of one (1) year. This warranty applies to the original purchase only.

DB Drive will either repair or replace (as its option) any unit that has been found to be defective and under warranty provided the defect occurs within the one (1) year warranty period.

This limited warranty does not extend to units that have been subjected to misuse, abuse, neglect, or accident. In DB Drive's judgment, products that show evidence of having been altered, modified, or serviced without DB Drive's authorization, will be ineligible under this warranty.

To obtain warranty service please contact your retailer or visit our website at www.dbdrive.net for more details.

Tel : 956-428-4263 Fax : 956-421-4513
www.dbdrive.net